



iSECUSYS IOS System Operation Manual

SECUSYS GROUP LIMITED

INDEX


1	Software installation and operating instructions	3
1 .1	Download and installation	3
1 .2	Server configuration and settings	7
1 .3	Operations and functions to implement	10

1 Software installation and operating instructions


1.1 Download and installation

Please make sure that your Smart Phone with Android Operation System can connect to the Internet correctly firstly

Click **App Store** desktop shortcut icon, go to the Apple App Store, and enter in the search tab **iSECUSYS** start the search, will search for an application. Shown as below figure:

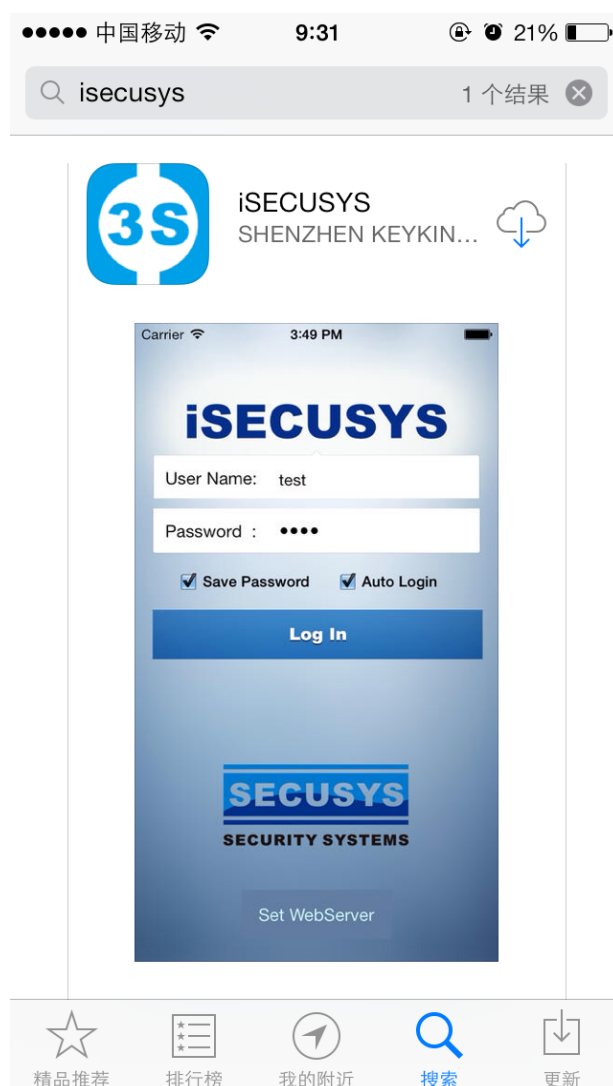


Click the download button like clouds begin automatically download and install, shown as below figure:

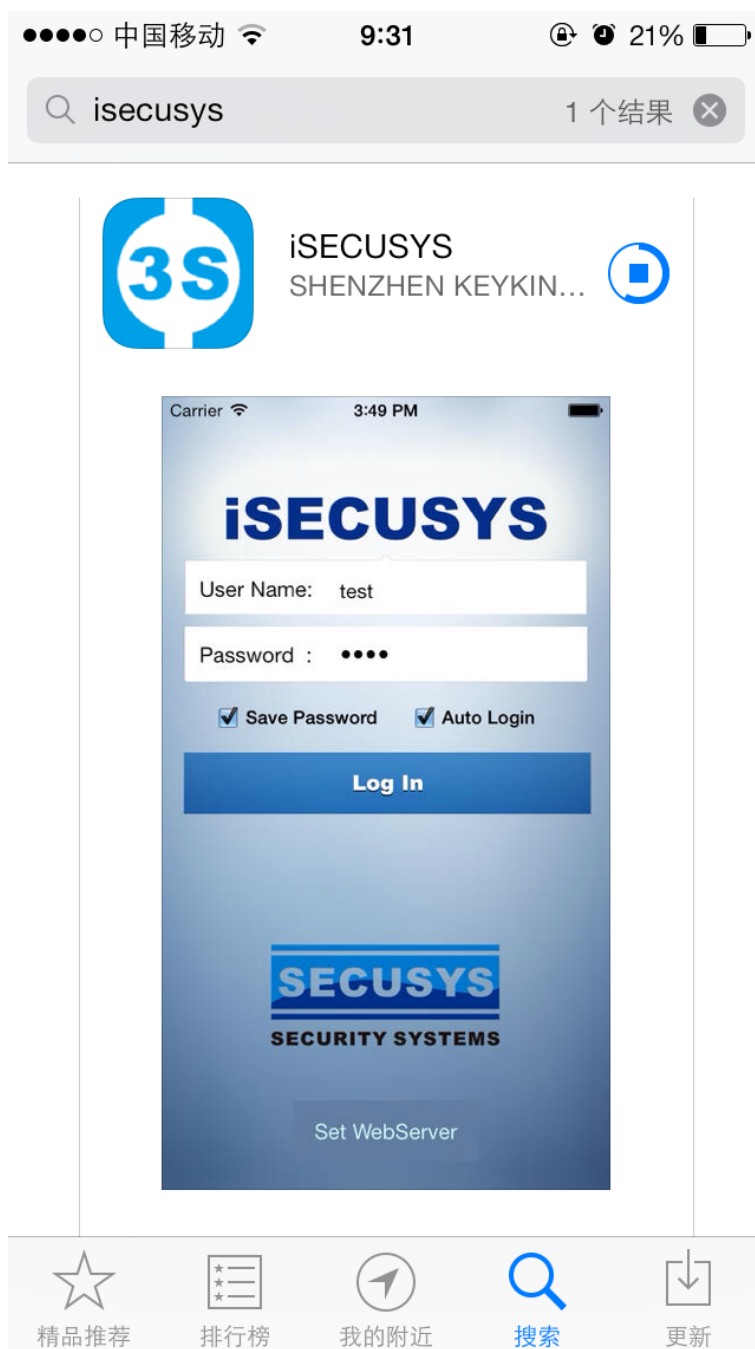

Installation is completed will shown as below figure:




After installation the desktop will shown as below:

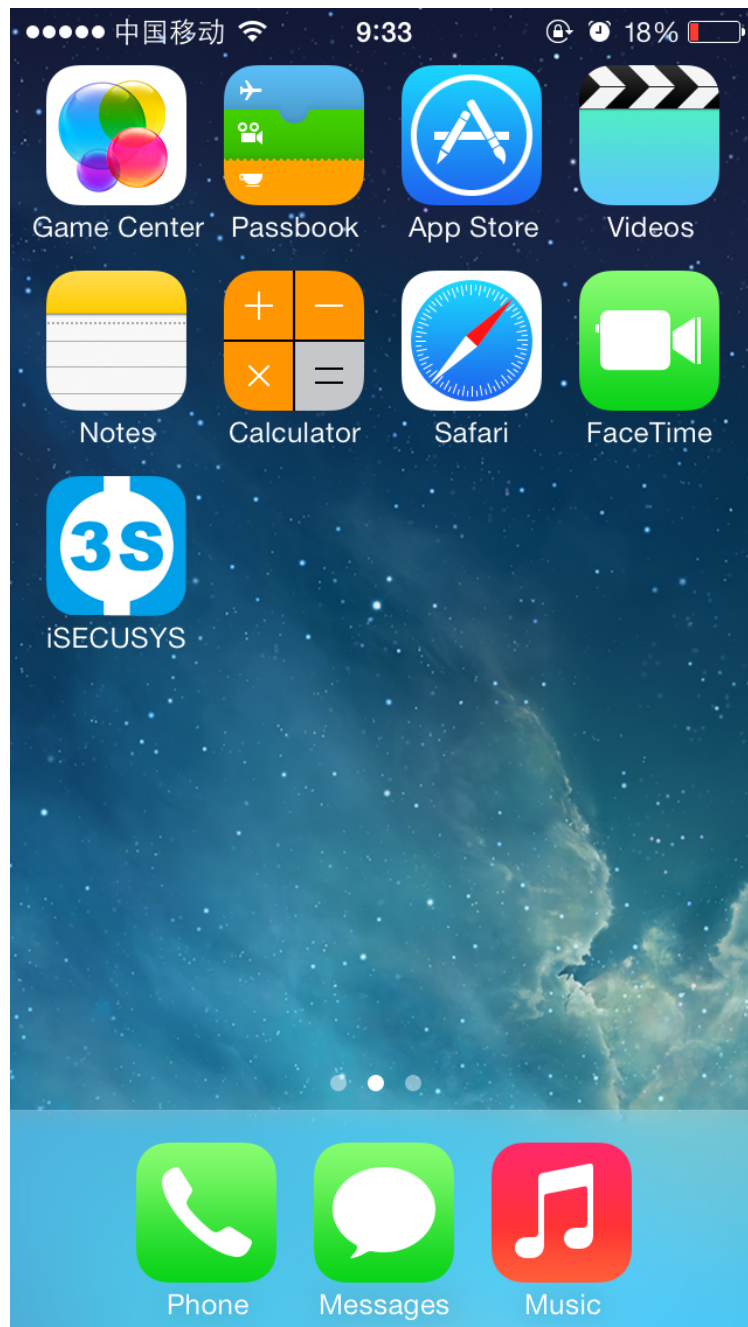

1.2 Server configuration and settings

Click iSECUSY desktop shortcut icon to run the application, you will be remind to set WebServer IP if the server IP is not configured, shown as below figure:

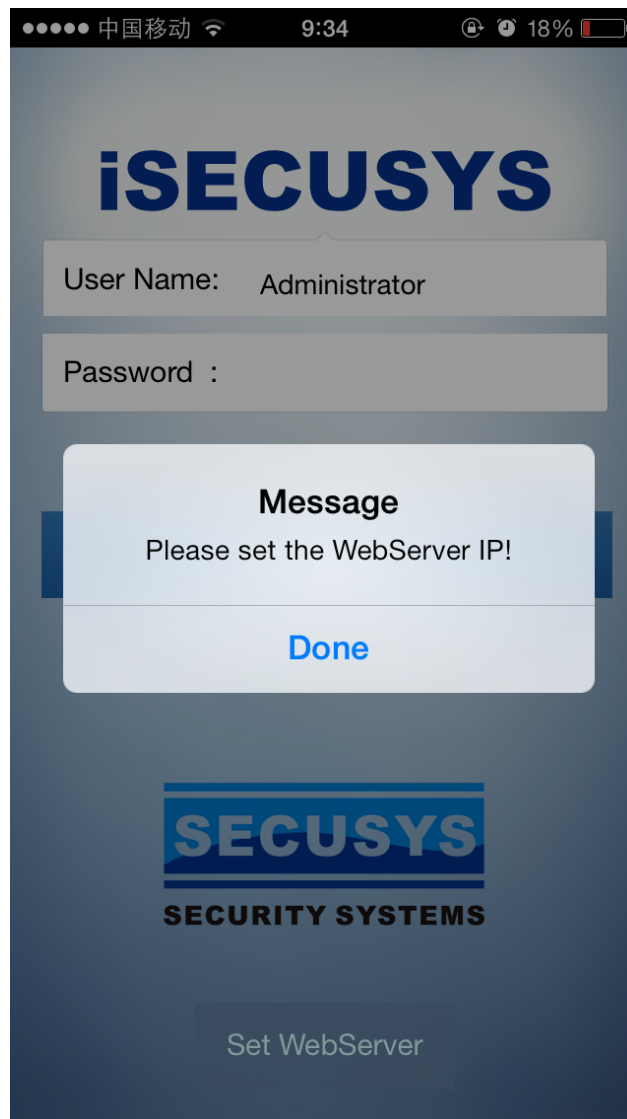

Click OK after setting, and then click WebServer set button to enter into server webpage settings page when the dialog disappear, set our server as example, click TEST after setting, click save button after test connection is successful. Please reset correct server setting if test is failed. After setting success will shown following figure:

Set WebServer IP

Please enter the WebServer IP:

mob.keyking.net

Port:

900

Test Connection

Save Back

Note: Server IP network including external and internal network, you can not use 3G or GPRS network to access. WebServer IP: That is our server computer IP, which is published by web server computer IP, for example, our web server published at 192.168.2.5, the port number is 7001 here WebServer IP filled into: 192.168.2.5 port number. If we learned to use dynamic DNS solution, mapping the internal IP network to the outer Internet, then you can access the server via 3G or GPRS.

●●●●● 中国电信 16:05 62%

Set WebServer IP

WebServer IP:

mob.keyking.net

Port:

900 [Test Connection](#)


[Advanced](#)

Suffix: /WebService/AccessWS.asmx

[Save](#) [Back](#)

1.3 Operations and functions to implement

1.3.1 Login Instructions:

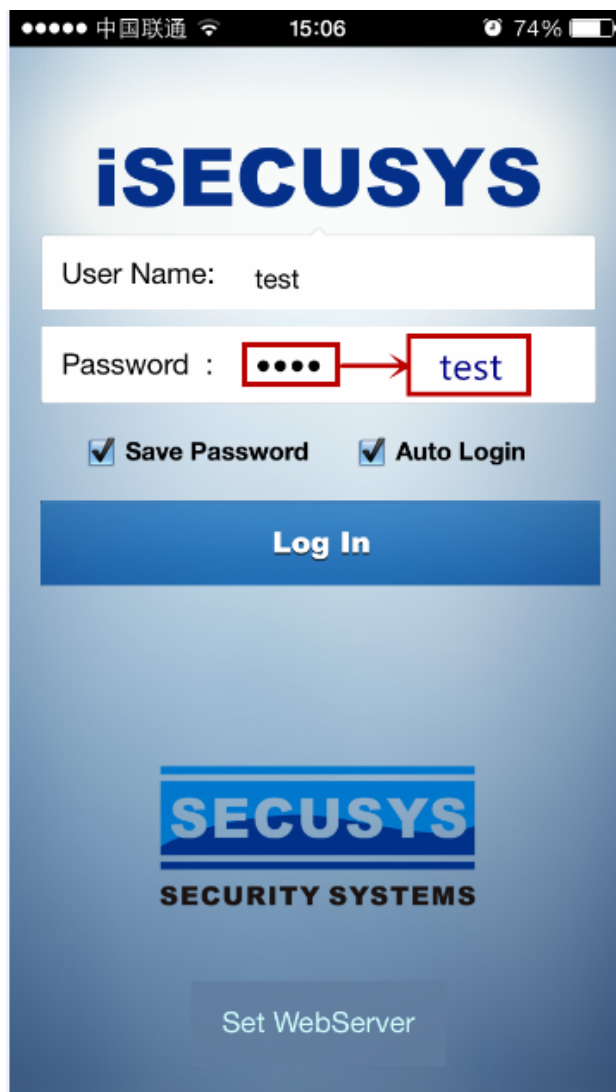

Account Description: SECUSYS account is fully compatible with Sphinx account, permissions set at Sphinx Account Management conducted (Please refer to the user manual Sphinx for detailed settings).

Note: Remember passwords and automatically logging only for the valid users who have successfully login already. And when using the automatic login, logout only after logging in the main interface to modify a non-automatic login, shown as below figure:

●●●●● 中国移动

9:38

16%

Setup

Event Auto Refresh



Refresh Interval

30 s

Controller Auto Refresh



Refresh Interval

30 s

Log Out

About iSECUSYS

Setting door open Shortcut



Events



Personnel List




Remote Control



Setup

1.3.2 Event Checking:

A. Real-time card events monitoring

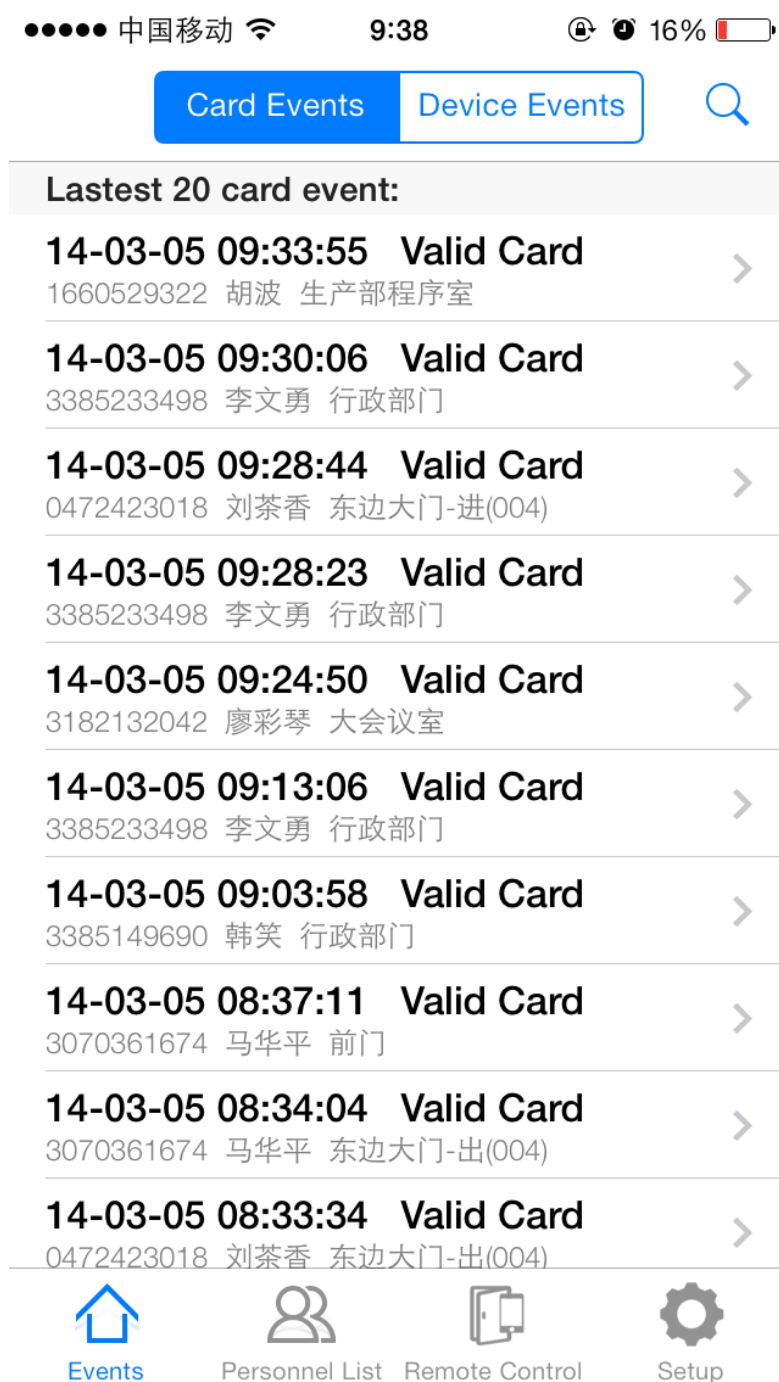

Click below to enter the details of View:

●●●●● 中国移动 9:39 16%

[< Back](#) **Card Event Details**

Time: 14-03-05 09:24:50

Event Code: 54

Event Name: Valid Card

Address: Keyking Group

Line ID: 7

Panel ID: 1

Panel Name: 办公大厅

Door ID: 1

Door Name: 大会议室

Card No.: 3182132042

Dept Name: 生产部

Person ID: 10973

Person Code:

First Name: 廖彩琴

Last Name:



Events



Personnel List




Remote Control



Setup

B. Real-time equipment events monitoring

Click truth paging device events button, shown as below figure:

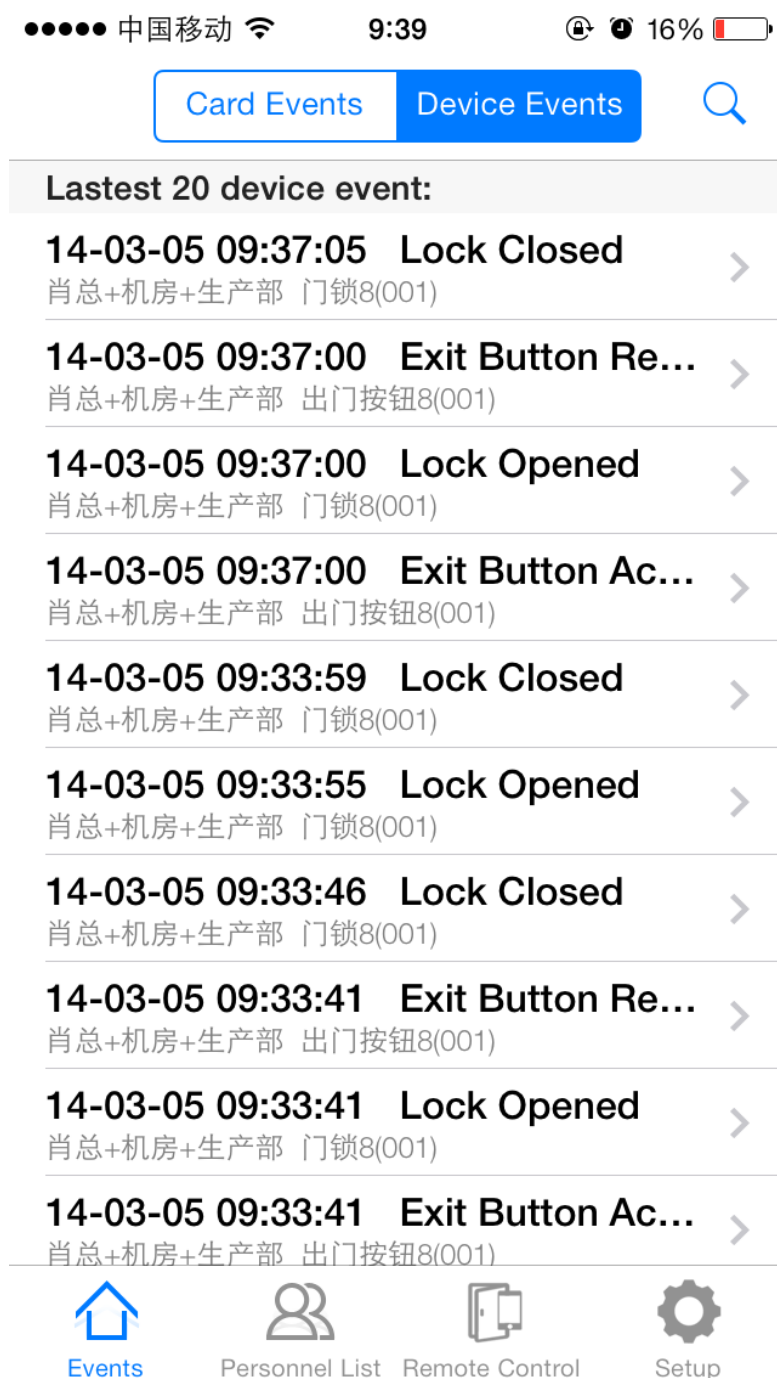

Click below figures for details page:

●●●●● 中国移动 9:39 16%

[Back](#) **Device Event Details**

Time: 14-03-05 09:37:05
Event Code: 23
Event Name: Lock Closed
Address: Keyking Group
Line ID: 1
Panel ID: 1
Panel Name: 肖总+机房+生产部
Door ID: 71
Door Name: 门锁8(001)



Events



Personnel List



Remote Control




Setup

Note: When set real-time events automatically refresh in setting page, refresh intervals will be real-time event log, effective immediately after setting.

C. Checking historical events

1. Checking history swipe card events

When entering event checking page, click on the search button will jump to the top right navigation bar on the historical event checking page, shown as below figure:

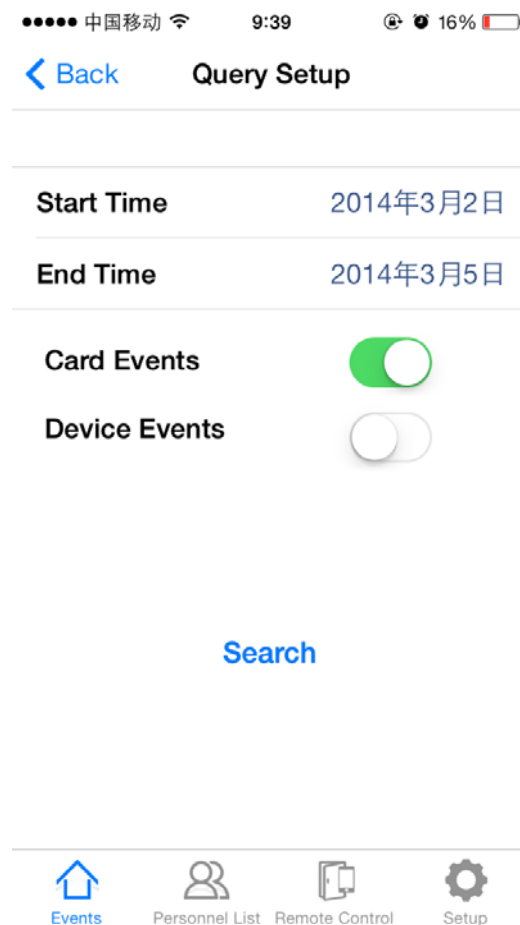

Choose the event type and the start time and end time, click on the check button below to find the corresponding event will begin every 40 events page is loaded, paddling in the end if the display is loaded more items, then click again to load one after until all loaded below the load will not be displayed more options.

●●●●● 中国移动 9:40 16%

< Query Setup History Card Events

14-03-02~14-03-05 Total:1197

14-03-04 23:54:15 Valid Card

0472269290 肖敏英 保安室进门



14-03-04 23:47:10 Valid Card

1660950906 浩佳1347 出门3(004)



14-03-04 23:45:28 Valid Card

3071749434 王阳明 东边大门-出(004)



14-03-04 23:43:57 Valid Card

1660950906 浩佳1347 西边大门-进门(004)



14-03-04 23:30:54 Valid Card

0472439546 浩佳7 出门3(004)



14-03-04 23:12:07 Valid Card

1660770298 浩佳31 出门3(004)



14-03-04 23:04:25 Valid Card

1660950906 浩佳1347 保安室出门



14-03-04 23:02:40 Valid Card

1660950906 浩佳1347 出门3(004)



14-03-04 23:01:11 Valid Card

3036087432 张优良 前门



14-03-04 23:00:46 Valid Card

1660950906 浩佳1347 西边大门-进门(004)



Events



Personnel List



Remote Control



Setup

Click below to enter detailed view page:

●●●●● 中国移动 9:39 16%

[< Back](#) **Device Event Details**

Time: 14-03-05 09:37:05
Event Code: 23
Event Name: Lock Closed
Address: Keyking Group
Line ID: 1
Panel ID: 1
Panel Name: 肖总+机房+生产部
Door ID: 71
Door Name: 门锁8(001)



Events



Personnel List





Remote Control



Setup

2. Checking device history events

When checking event content is device event, the device event can be checked at all settled period of time.

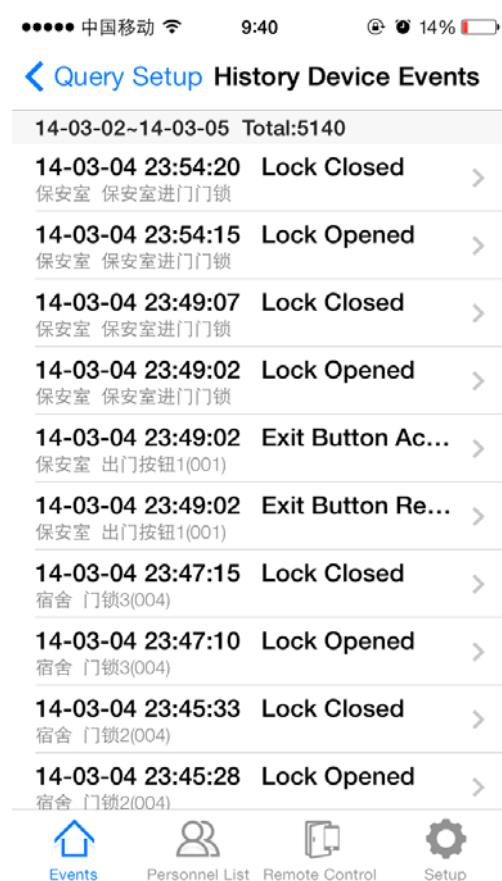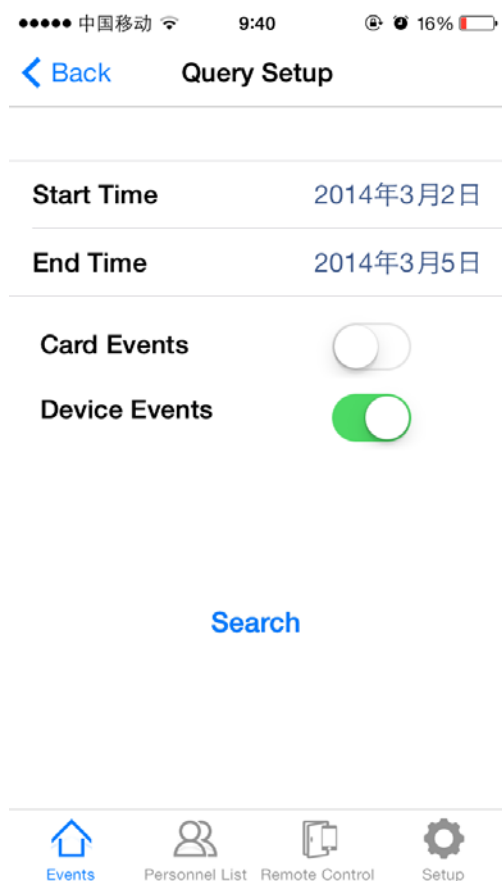

Click to enter a detailed view device historical events, shown as below figure:

中国移动

9:42

14%

<

Back

Info Setup

Personnel ID: -1

First Name:

test

Last Name:

Gender:

Male

ID Number:

Department:

Sales Department

Group:

Group Name

Joining Date:

2014-03-05

TEL:

Modify

Delete

Apply

Basic Information

Card


Access Level

Note: Checking historical events, the start and end time interval is set to be less than two months, otherwise invalid will remind, such as your valid card to check all the events between July 1, 2013 to October 1, 2013, then you should set from September 1, 2013 to October 1, 2013 End from July 1, 2013 to September 1, 2013 after checking.

1.3.3 Personnel Management:

A. Add Staff

There are three methods to add staff:

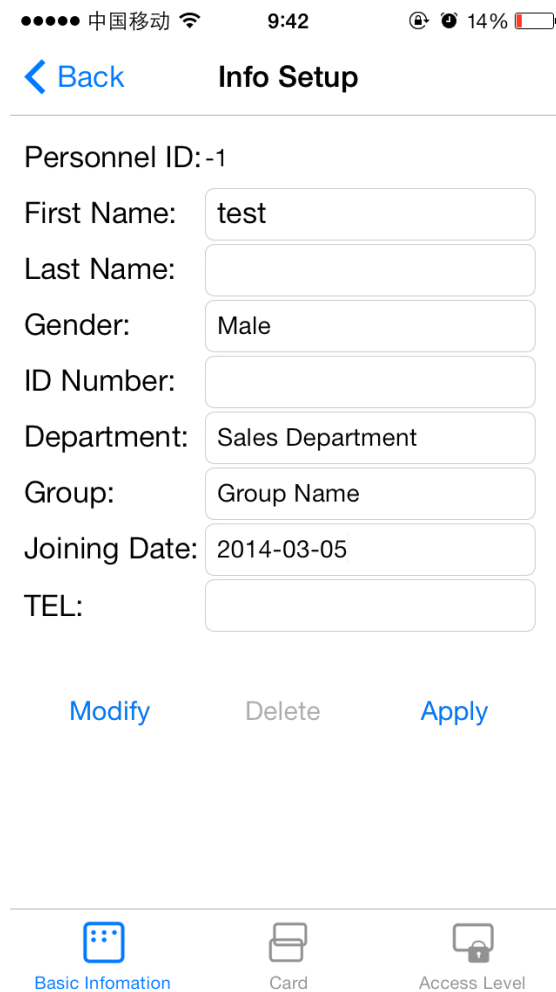

●●●● 中国移动 9:42 14%

[< Back](#) Info Setup

Personnel ID: -1

First Name:

Last Name:

Gender:

ID Number:

Department:

Group:

Joining Date:

TEL:

[Modify](#) [Delete](#) [Apply](#)

[Basic Information](#) [Card](#) [Access Level](#)

The first option is to add a new card which has not been registered, and no need to enter the card number manually,

The second option is to add personnel from the root department which has exist,

The third option is to add people from your department, in which case you can not modify the input sector, will be directly added to the current department.

A. Delete, and modify staff.

●●●● 中国移动 9:43 13%

< Personnel List Info Setup

Personnel ID: 11385

First Name: test

Last Name:

Gender: Male

ID Number:

Department: Sales Department

Group: Group Name

Joining Date: 2014-03-05

TEL:

Staff has been deleted!

Modify

Delete

Apply



Basic Infomation



Card



Access Level

A. Issuing card to new issuing

中国移动 9:43 13%

[Back](#) **Info Setup**

Use Access Card: ☒

Card No.: 123456

Card PIN: 0000

Boss/Master Card: ☐

Manager Card: ☐

Handicap Card: ☐

Temp Card: ☒

From Time: 2014-03-05

Expiration Time: 2014-03-07

Current Area: Outside

[Modify](#) [Lose](#) [Disable](#) [Apply](#)

Basic Information **Card** Access Level

Issuing card to new staff, you can send a special card, regional cards, non-regional restricted area card, disabled card and temporary card, these cards features are the same as with the Sphinx.

With loss and unlooses solution function, with disabling and enabling functions.

B. Delete, and modify personnel cards

Delete and enable the card is set on whether to use the access card switch, enter the card number when you do not enter the card number is incorrect or the card is enabled unsuccessful.

●●●●● 中国移动 9:45 13%

< Personnel List Info Setup

Use Access Card: ☐

This card has been remove...

Card No.: 0

Card PIN: 0000

Boss/Master Card: ☐

Manager Card: ☐

Handicap Card: ☐

Temp Card: ☒

From Time: 2014-03-05

Expiration Time: 2014-03-07


Current Area: Outside


Modify


Lose

Disable

Apply

Basic Information

Card

Access Level

C. Adding and deleting personnel access permissions

Click the Edit button, and when the list belong to modify mode then you can modify personnel access permissions.

●●●●● 中国移动

9:43

13%

Back

Info Setup

Personnel access level:

Modify

☒ 2 技术部

☒ 4 市场部

☐ 5 浩佳

☐ 7 生产部公共

☐ 8 公共门点

☐ 9 生产部主管

☐ 10 生产部成品仓

☐ 11 生产部半成品

☐ 14 宿舍

Basic Infomation

Card

Access Level


1.3.4 Remote open door


.A. Door-point online status monitoring



B. Open and close the door

Click the controller, enter the door which will be control, click the door you want to open, indicating success or failure, shown as below figure:

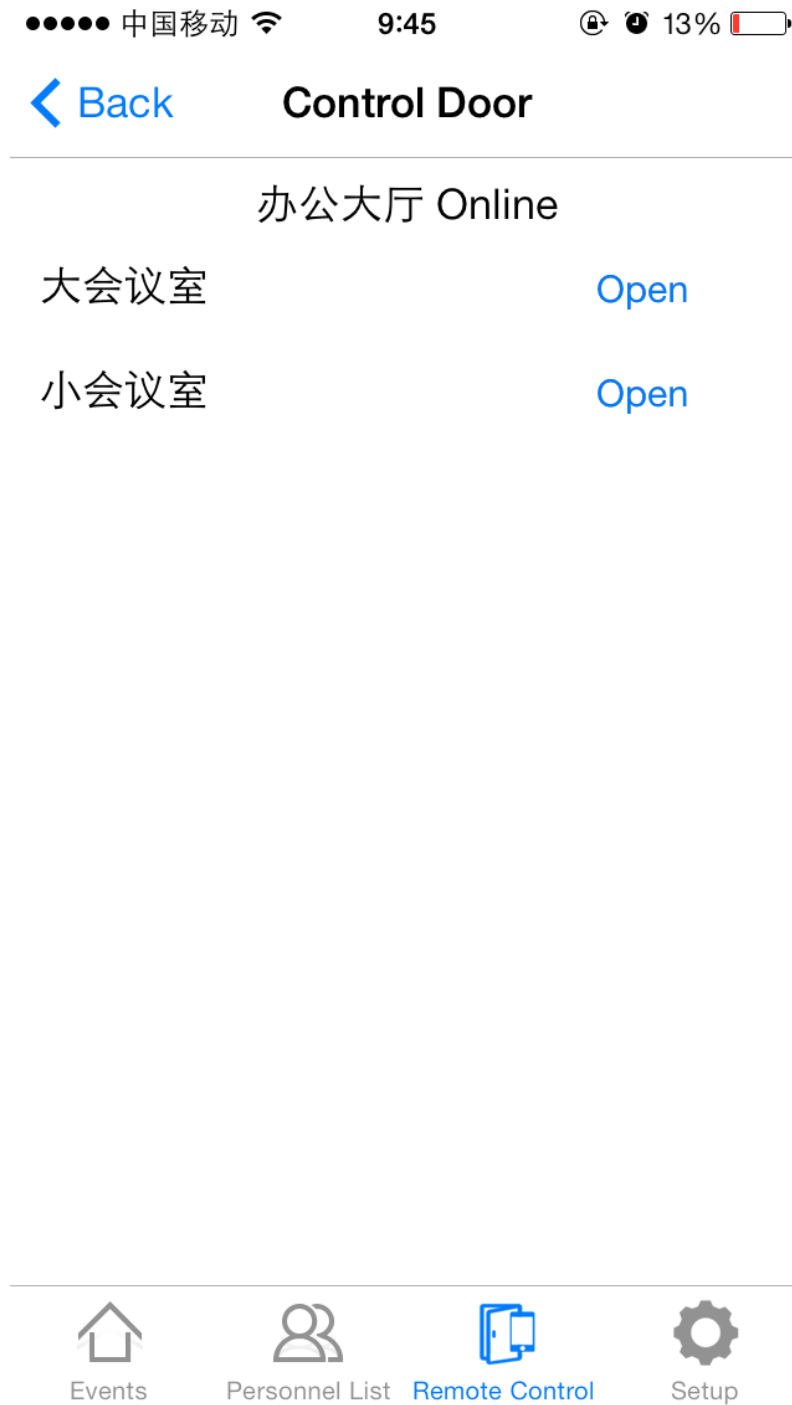

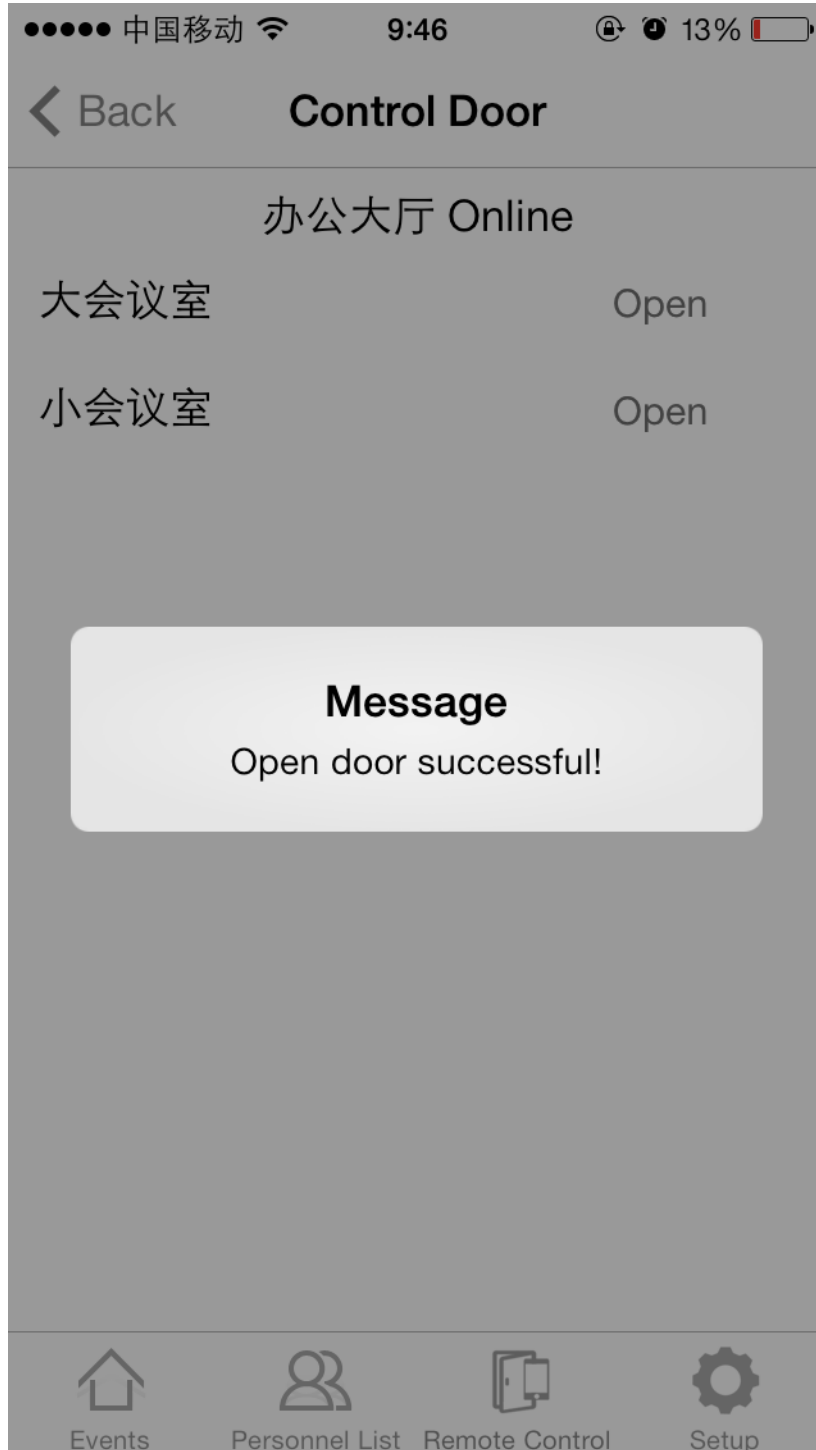

Note: When real-time view online status, if set opening controller online refresh real time in setting page, the software will refresh interval online in the settings page, otherwise need to manually refresh.